



Operation Instruction

C267


Cat6 Keystone Jack

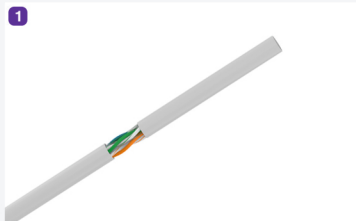

Strip the jacket.

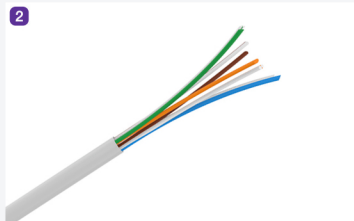


Straighten and arrange wires.

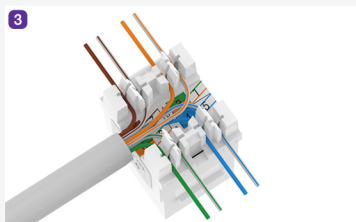


Insert wires into the keystone jack slots.



Use a punch-down tool to punch down and cut wires.

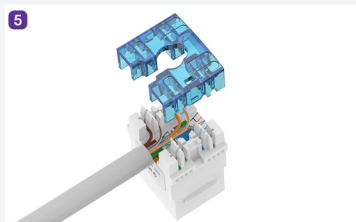

Cover the cap.

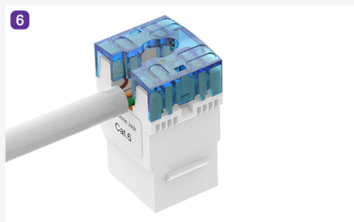

As shown.