Operation Instruction

C265-6A

Cat6a Keystone Jack

1



Strip off the cable jacket.

2




Wrap the braided shielding around the jacket.

3




Straighten and arrange wires.

4

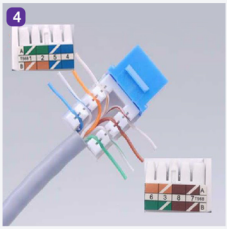

Insert eight wires into the keystone jack slots.

5

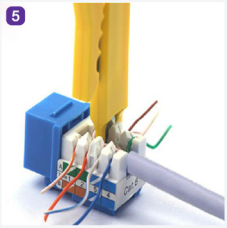

Press wires tightly into the slots.

6



Use the punch-down tool to cut and punch down wires.

7



As shown.

8



Insert it into the keystone wall plate.

9



Complete.