
Operation Instruction

M601A

Cat6a Toolless Keystone Jack

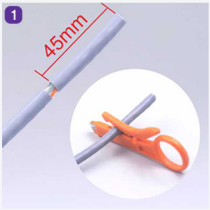

Strip the cable jacket.



Twist the braided shielding and wrap it around the cable.



Straighten and arrange wires.



Insert wires into the conductor holder.



T568A and T568B wiring diagrams are printed on the holder and keystone jack.



T568B wiring standard is recommended.



Cut off the excess wires.



Put the conductor holder into the keystone jack.



As shown.



Press down the housing caps.



Fix the keystone jack with a cable tie and cut off the excess part.



Complete.