
Operation Instruction

M230

Cat6a Shielded Keystone Coupler

1

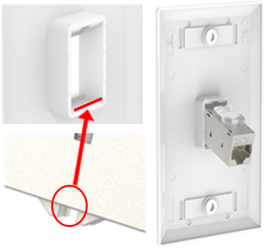


Put the bottom of the keystone coupler into the wall plate first.

2



Use the bottom as a level and insert the keystone coupler.

3

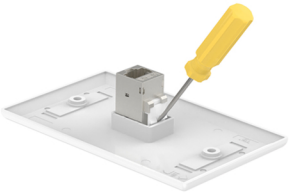

Use a flat-blade screwdriver to depress the top clip and hinge the coupler down.

4



Remove the keystone coupler easily. (Be careful not to injure your hands.)