



Operation Instruction

M602A


Cat6a Toolless Keystone Jack

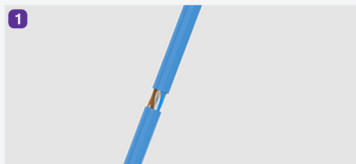


Strip the cable jacket.

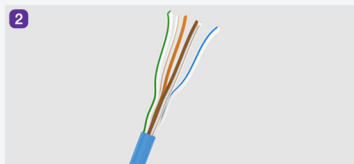


Straighten and arrange wires.

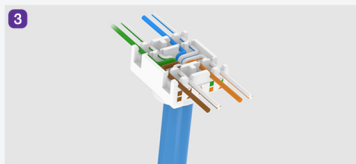

Insert wires into the conductor holder according to T568A and T568B wiring diagram.

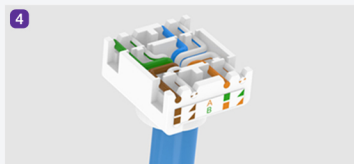

Cut off excess wires.

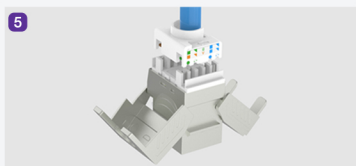

Put the conductor holder into the keystone jack.



As shown.



Press down the housing caps.



Complete.