Operation Instruction

KJ21-C7

Cat7 Toolless Cable Extender

1



Get your RJ45 Cat7 Coupler, cable stripper, wire cutter and two ethernet cables ready.

2




Slide the boot on the cable.

3




Strip the cable.

4

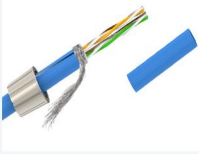

Twist the braided shielding and wrap it around the cable jacket.

5

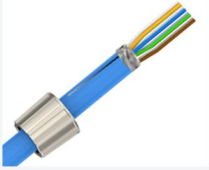


Arrange the wires.

6



Insert wires into the conductor holder according to the T568A or T568B wiring diagram.

7

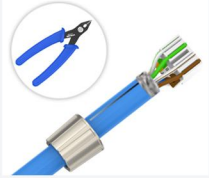

Cut off excess wires.

8



Insert the conductor holder into the PCB.

9



Pay attention to the notch.

10



Press the housing cover and tighten the strain relief boot.

11



The other side is the same as step 2-10.

12



Complete.