


Operation Instruction

KJ20GD-C7


Cat7 Toolless Plug



1 Slide the boot on the cable and strip the jacket.

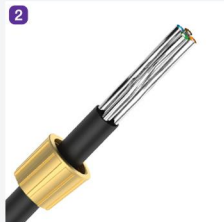


2 Cut off the foil.

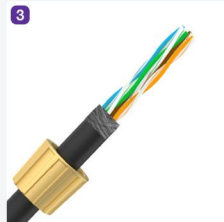

3 Twist the braided shielding and wrap it around the cable jacket.



4 Arrange the wires.

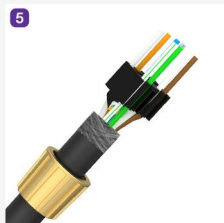

5 Insert wires into the conductor holder according to T568A or T568B wiring diagram.




6 Cut off excess wires.



7 Insert into PCB.



8 Tighten the boot.

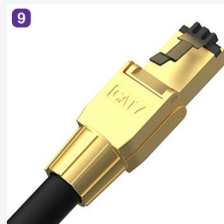

9 Complete.