Operation Instruction

M802-C8


Cat8 Shielded Keystone Jack

1




Strip off the cable jacket.

2

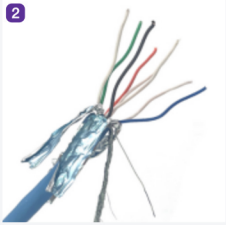

Cut the foiled shielding and wrap the braided shielding around the cable jacket.

3

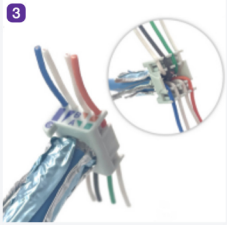

Insert wires into the conductor holder according to T568A or T568B wiring standards.

4




Cut off the excess wires.

5



Wrap the copper foil around the jacket and cut off the excess part.

6

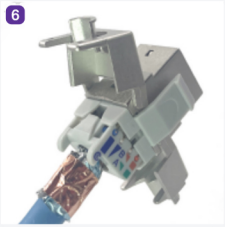

Insert the conductor holder into the keystone jack and press down.

7



As shown.

8



Fix the keystone jack with a cable tie and cut off the excess part.

9



Complete.