

VCELINK


www.vcelink.com
sales@vcelink.com
Model: C265BL-6

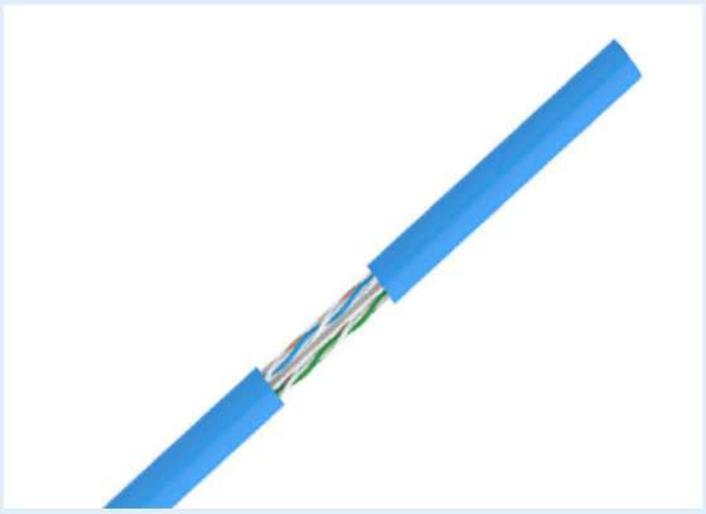

1. Strip the jacket

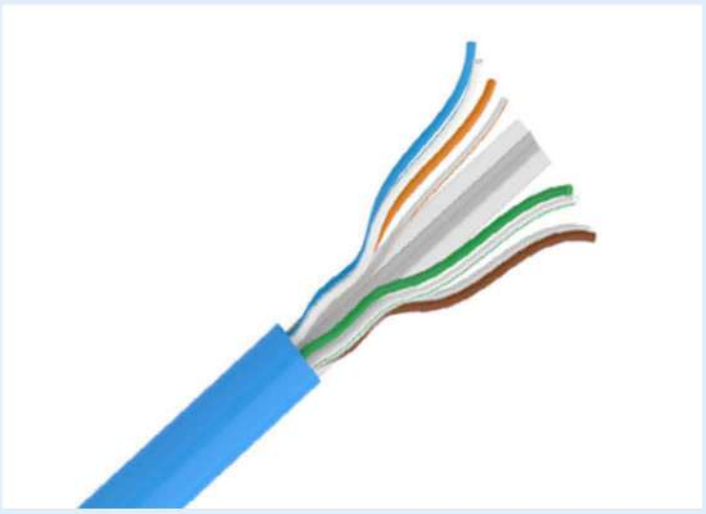


2. Separate the wires

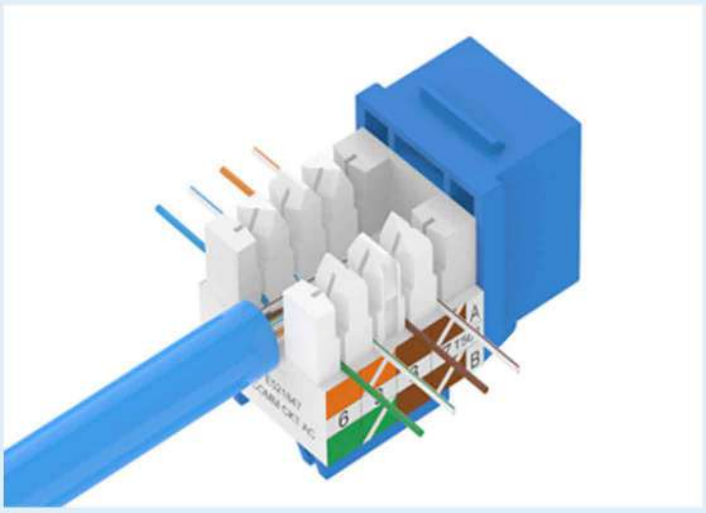


3. Fix the wires into the keystone jack



4. Use a punch down tool to cut the extra wires

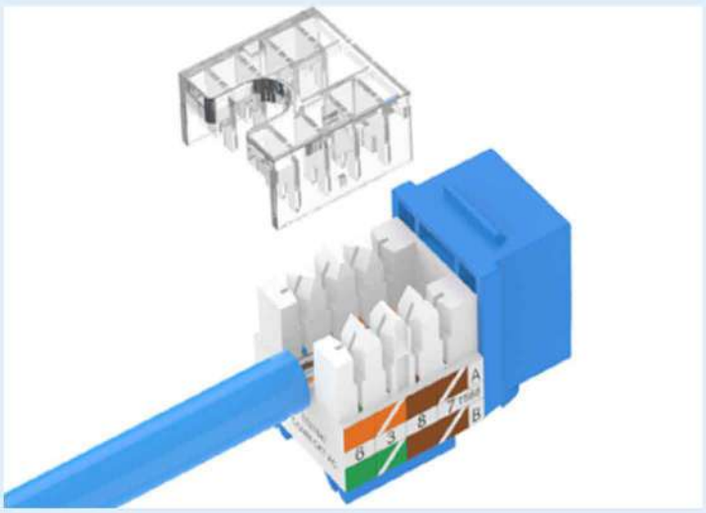

5. Close the lid

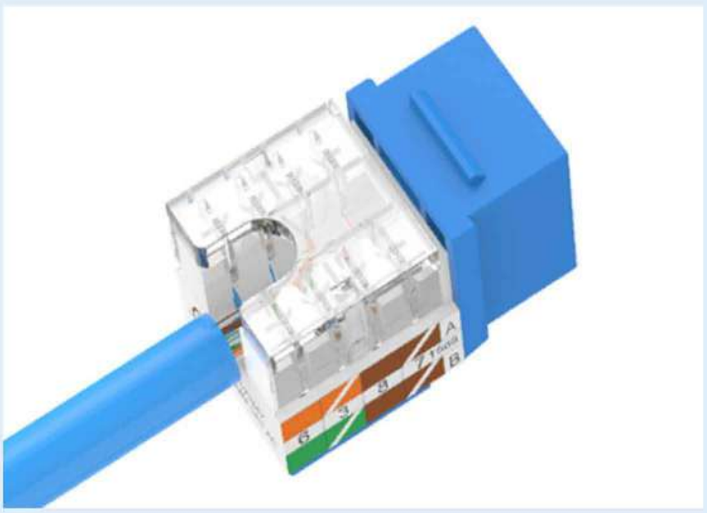

6. As shown