


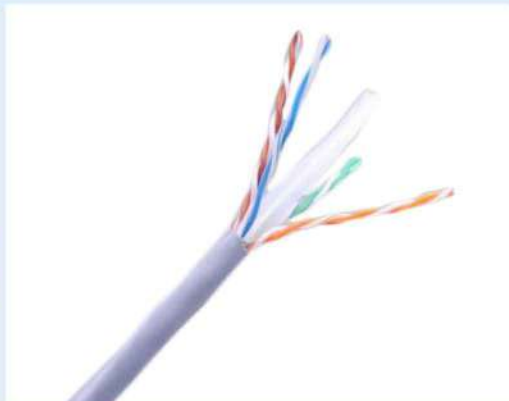


1. Strip the cable jacket



2. Separate the wires




3. Arrange the wires

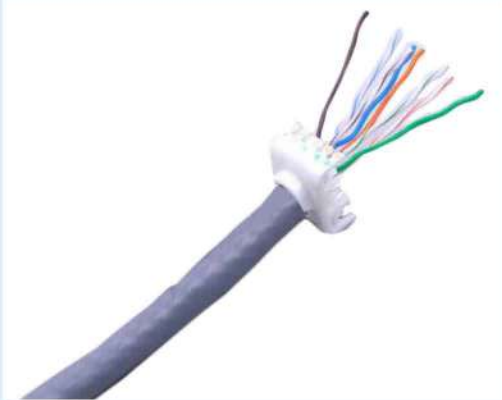


4. Put the cable through the pressure cover



5. Aligning the wires as photo

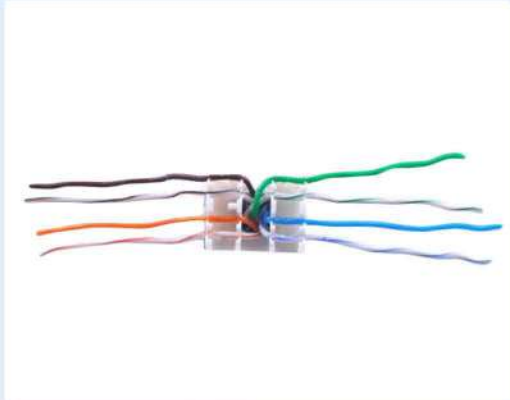

6. Aligning the wires and press down. T568B is recommended

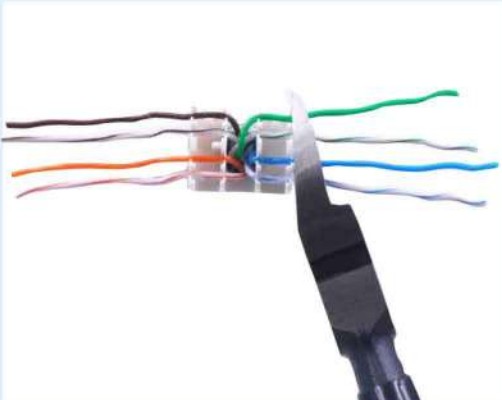

7. Cut off the needless cable edge



8. Put the cable pressing cover into module line base



9. As shown



10. Use the both side cover to grip



11. Push the cable tie in and lock it. Cut off the excess braided and cable tie



12. Complete