


Operation Instruction

KJ17-6A


Cat6a Toolless Plug




Slide the boot on the cable.

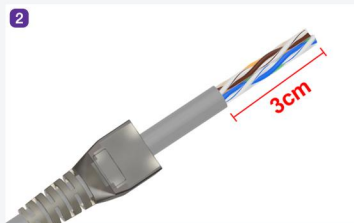


Strip off the cable jacket by 3 cm.

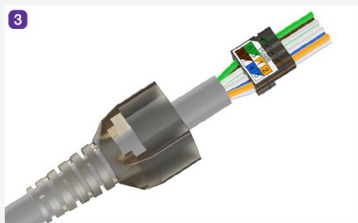

Insert eight wires into the conductor holder according to T568A or T568B wiring diagram.

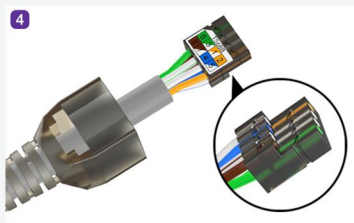

Cut off excess wires.

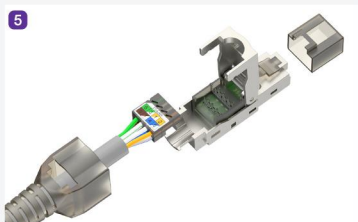

Insert the conductor holder into the PCB.



Press the housing lid and fix it with the cable tie.