


Operation Instruction

KJ19-6A


RJ45 Cat6a Toolless Plug

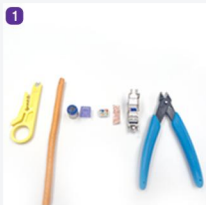


1 Prepare the RJ45 plug, stripping tool, Ethernet cable, and pliers.



2 Insert the strain relief boot.

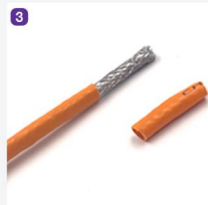


3 Strip the jacket.

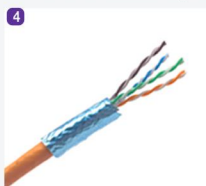


4 Wrap the aluminum foil around the cable jacket and arrange eight wires.



5 Wrap the copper foil and cut off the excess copper foil.

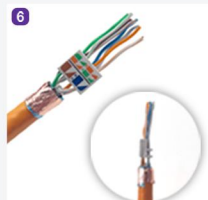

6 Insert wires into the conductor holder according to the T568A or T568B wiring diagram.

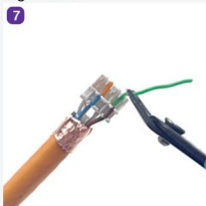

7 Cut off excess wires.



8 Check the wiring diagram.



9 Check if the conductor holder is aligned with the slot.



10 Align the slots of the wire cap, cover the wire cap.



11 Press the housing lid.



12 Tighten the strain relief boot.