

Operation Instruction

KJ20-6A

RJ45 Cat6a Toolless Plug

1



Prepare the RJ45 plug and Ethernet cable.

2




Insert the strain relief boot.

3




Strip the jacket.

4

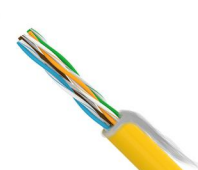

Twist the braided shielding and wrap it around the cable jacket.

5

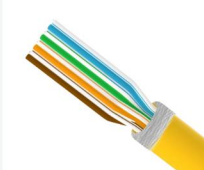

Arrange the wires.

6



Insert wires into the slots of conductor holder according to T568A or T568B wiring diagram.

7



Cut excess wires.

8



Check the wiring order on PCB.

9



Pay attention to the notch. Insert the conductor holder into the PCB.

10



Press the housing lid.

11



Tighten the strain relief boot.

12



Complete.