

Operation Instruction

KJ20-C8

RJ45 Cat8 Toolless Plug

1



Prepare the RJ45 plug and Ethernet cable.

2




Slide the strain relief boot on the cable.

3




Strip the jacket.

4

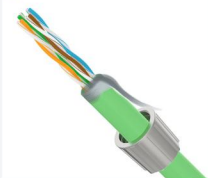


Twist the braided shielding and wrap it around the cable jacket.

5

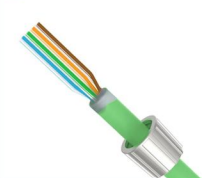

Arrange the wires.

6

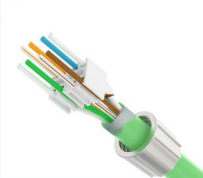


Insert wires into the conductor holder according to T568A or T568B wiring diagram.

7



Cut off excess wires.

8

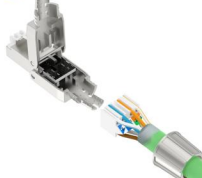


Check the wiring order on PCB.

9



Pay attention to the notch and insert the conductor holder in to the PCB.

10

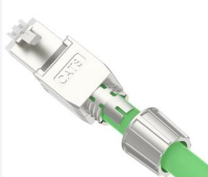

Press the housing cover.

11



Tighten the boot.

12



Complete.