


Operation Instruction

KJ23-C8


Cat8 Toolless Plug




Insert the strain relief boot.

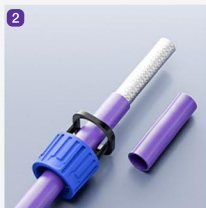

Strip off the cable jacket.

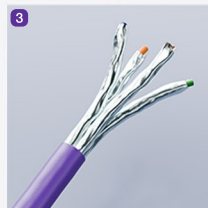


Strip off the foiled shielding on each twisted pair.

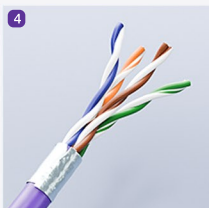


Wrap the aluminum foil around the cable jacket.




Arrange eight wires and wrap the copper foil.

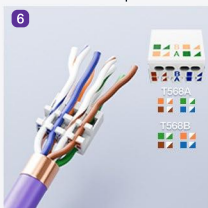

Insert eight wires into the conductor holder according to T568A or T568B wiring diagrams.

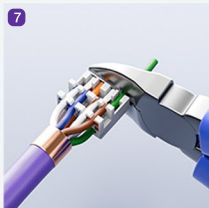

Cut off the excess wires.

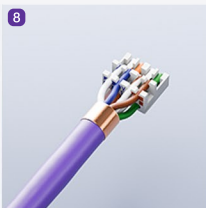

Check the wiring diagram.



Align the conductor holder with the slots of the wire cap.



Cover the wire cap and press it.



Tighten the strain relief boot.



Successful termination.