


Operation Instruction

SJ657

Shielded Cat7 Pass-through Connector

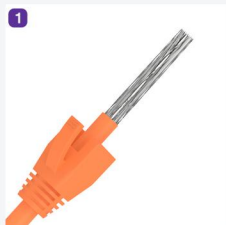

Slide the boot on the cable and strip the cable jacket.




Wrap the braided shielding around the cable jacket.



Straighten the wires.



Divide wires into two rows.

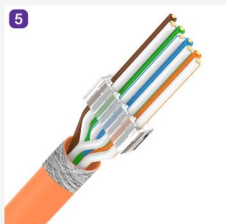

Insert eight wires into the load bar.



Double check.



Crimp the RJ45 plug.



Crimp the ground collar.



Complete.