Operation Instruction

SJ661

Unshielded Cat6 Pass-through Connector

1

Slide the strain relief boot on your cable before termination.

2

Strip the cable jacket.

3

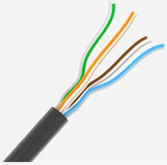

Cut the spline and ripcord.

4

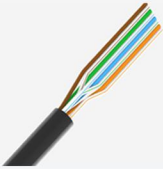

Straighten wires and give them an angled cut.

5

Insert the wires into the plug.

6

Crimp the plug.

7

Slide the boot onto the RJ45 plug.

8

You will get a more stable and professional connection.