

Operation Instruction

SJ660

Shielded Cat6 Two-piece Connector

1



Prepare the RJ45 plug, strain relief boot, and the Ethernet cable.

2



Slide the strain relief boot on the cable.

3




Strip the cable jacket with an RJ45 crimping tool.

4



Strip the cable jacket.

5

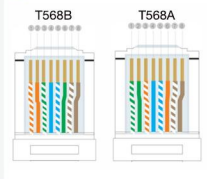

Separate the wires.

6



Keep the wires neat, T568B is recommended.

7



Cut the wires in oblique angle.

8



Insert eight wires into the RJ45 connector.

9



Put on the strain relief boot.

10



Complete as shown.

11



Crimp plug.

12



Complete.