

Operation Instruction

SJ653

Shielded Two-piece Cat6 Connector

1



Prepare the RJ45 plug, boot, and the Ethernet cable. Slide the boot on the cable.

2



Strip the cable jacket.

3



Separate the wires.

4



Keep the wires neat, T568B is recommended.

5




Insert wires into the load bar.

6



Cut excess wires.

7

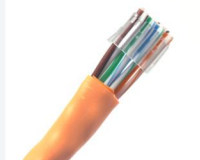

Complete as shown.

8



Assemble plug.

9



Ensure eight wires are placed in the right position.

10



Crimp plug.

11



Slide the boot onto the RJ45 plug.

12



Complete.