

Operation Instruction

SJ661


Unshielded Cat6 Pass-through Connector

1




Slide the strain relief boot on your cable before termination.

2

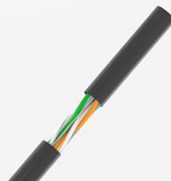


Strip the cable jacket.

3

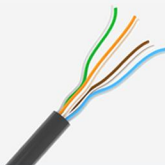

Cut the spline and ripcord.

4

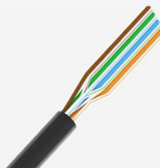

Straighten wires and give them an angled cut.

5



Insert the wires into the plug.

6



Crimp the plug.

7



Slide the boot onto the RJ45 plug.

8



You will get a more stable and professional connection.