

Operation Instruction

KJ22-6A

Unshielded Cat6a Toolless Plug



Slide the strain relief boot on the cable.




Strip off the cable jacket by 2cm.



Follow the color-coded


Arrange and Straighten the wires.

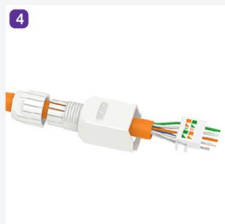

Insert wires into the conductor holder.



Cut off excess wires.

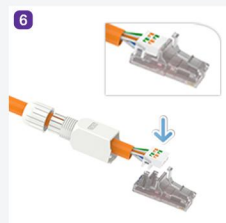

Align the grooves and press them together.



Close the cover.



Tighten the strain relief boot.



Complete.