

Operation Instruction

SJ553

Unshielded Cat5e Pass-through Connector



Prepare the RJ45 plug, strain relief boot, and the Ethernet cable.



Slide the strain relief boot on the cable.



Strip the cable jacket with an RJ45 crimping tool.




Separate the wires.



Choose T568B or T568A color codes.



Keep the wires neat, T568B is recommended.

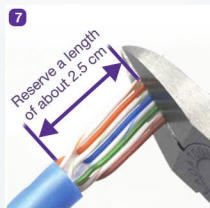

Cut the wires in oblique angle.



Insert eight wires into the RJ45 connector.



Put on the strain relief boot.



Complete as shown.



Crimp plug.



Complete.