

Operation Instruction

SJ652

Unshielded Two-piece Cat6 Connector




Prepare the RJ45 plug and Ethernet cable.




Use the cable stripping tool.




Successfully strip off the cable jacket.

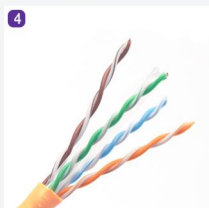


Separate the wires.

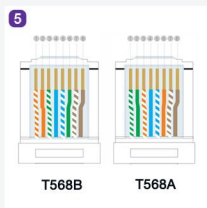


Choose T568B or T568A color codes.

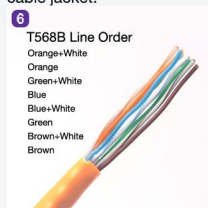


Keep the wires neat, T568B is recommended.

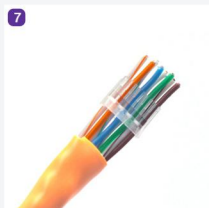

Insert eight wires into the load bar.

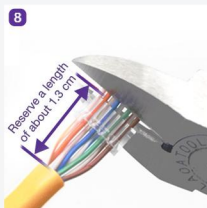


Cut excess wires.

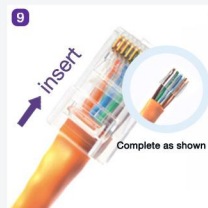

Insert the load bar into the RJ45 plug.



Ensure eight wires are placed in the right position.

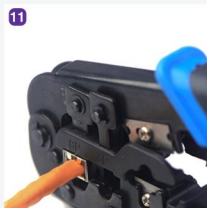

Crimp plug.



Complete.