Operating Instructions

DE08WT/DE09WT

Network Wall Plate

1




Strip off approximately 40 mm of the Ethernet cable outer sheath.

2



Peel off the aluminum foil, braid and ground wire (keep them) and wrap around the Ethernet cable.

3

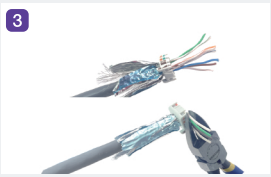

Placing the wires in the wiring cap according to the wiring diagram(T568B/T568A),trim the wires to be level with the wiring cap.

4



Use copper foil to wrap the foil shield, braided shield and ground wire around the Ethernet cable.

5



Align the wiring cap and press it in.

6



Press both sides of the outer cover simultaneously to close it, use zip ties to bundle it, and then remove any excess shielding and zip ties.

7



After separating the plastic part of the panel from the metal part, insert the keystone into the metal part according to the markings.

8



Secure the metal part to the wall using two screws.

9



Use screws to secure the plastic part to the metal part.

