VCELINK

www.vcelink.com

sales@vcelink.com

Model: SJ660

1. Get your RJ45 plug, cable cap, ethernet cable ready

2. Insert cable cap

3. Put the Ethernet cable into the stripping tool

4. Strip the cable jacket

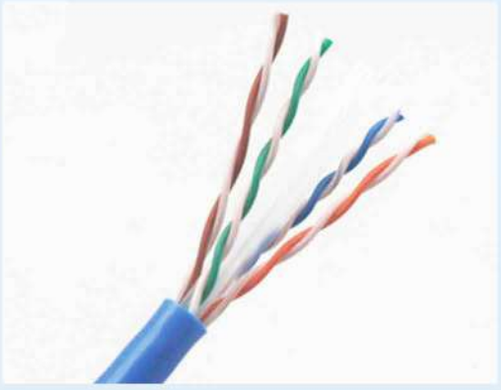

5. Separate the wires

6. Keep the wires neat, T568B is recommanded

7. Cut the wires in oblique angle

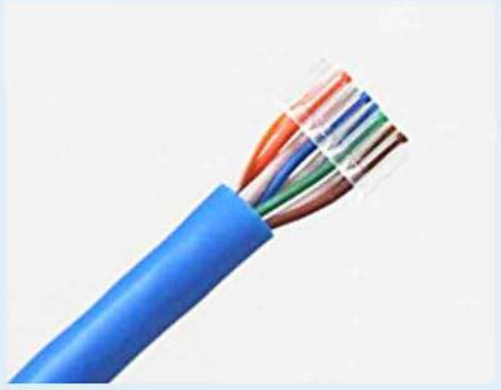

8. Wear the core wire into the RJ45 plug

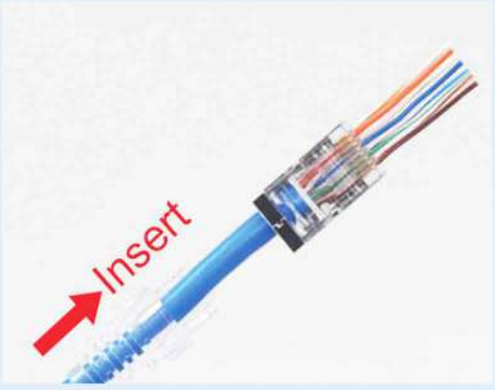

9. Insert the cable cap into the RJ45 plug

10. Complete as shown

11. Crimp plug

12. Complete